

# 隐藏式水箱安装说明书

## Installation Instruction

---



适宜型号 OLS-GP30035/GP30035B

A large, light gray abstract graphic consisting of several overlapping curved shapes, resembling a stylized 'R' or a series of concentric arcs, positioned in the lower half of the page.

# 一、产品尺寸说明

## OLS-GP30035B 隐藏水箱(配机架)



高度1140mm

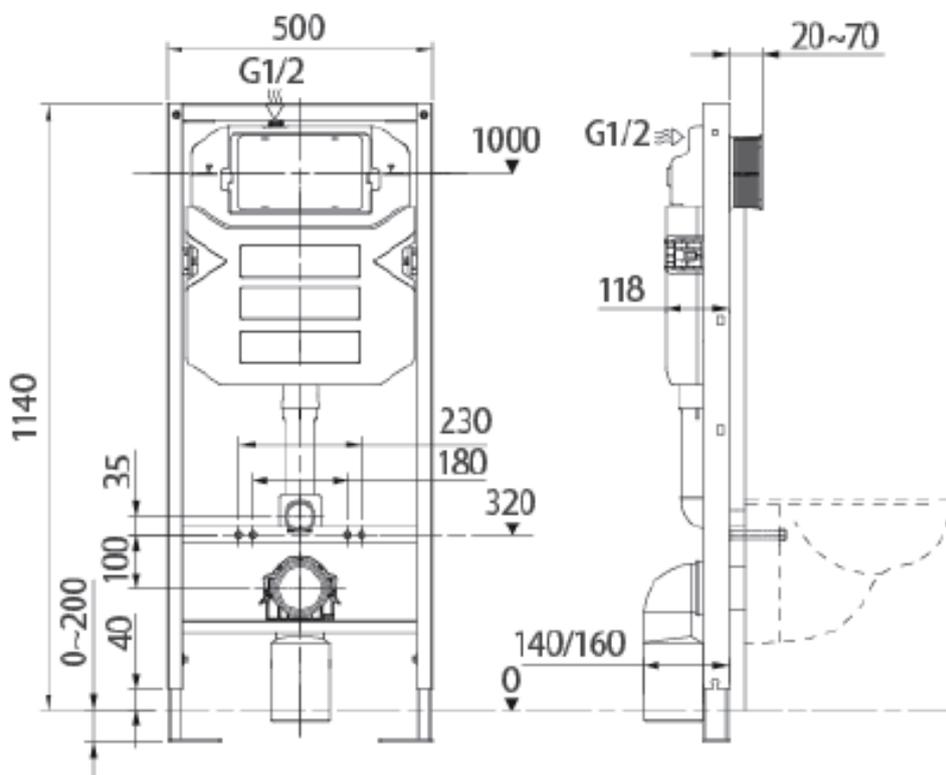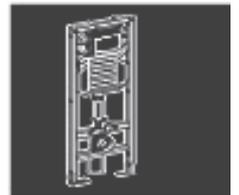






### 产品应用

- 面板前按
- 可适应干墙或湿墙安装
- 适配挂墙马桶, 锁紧孔距180/230mm
- 地表结构允许高度0-200mm







## 二、隐藏式水箱安装说明

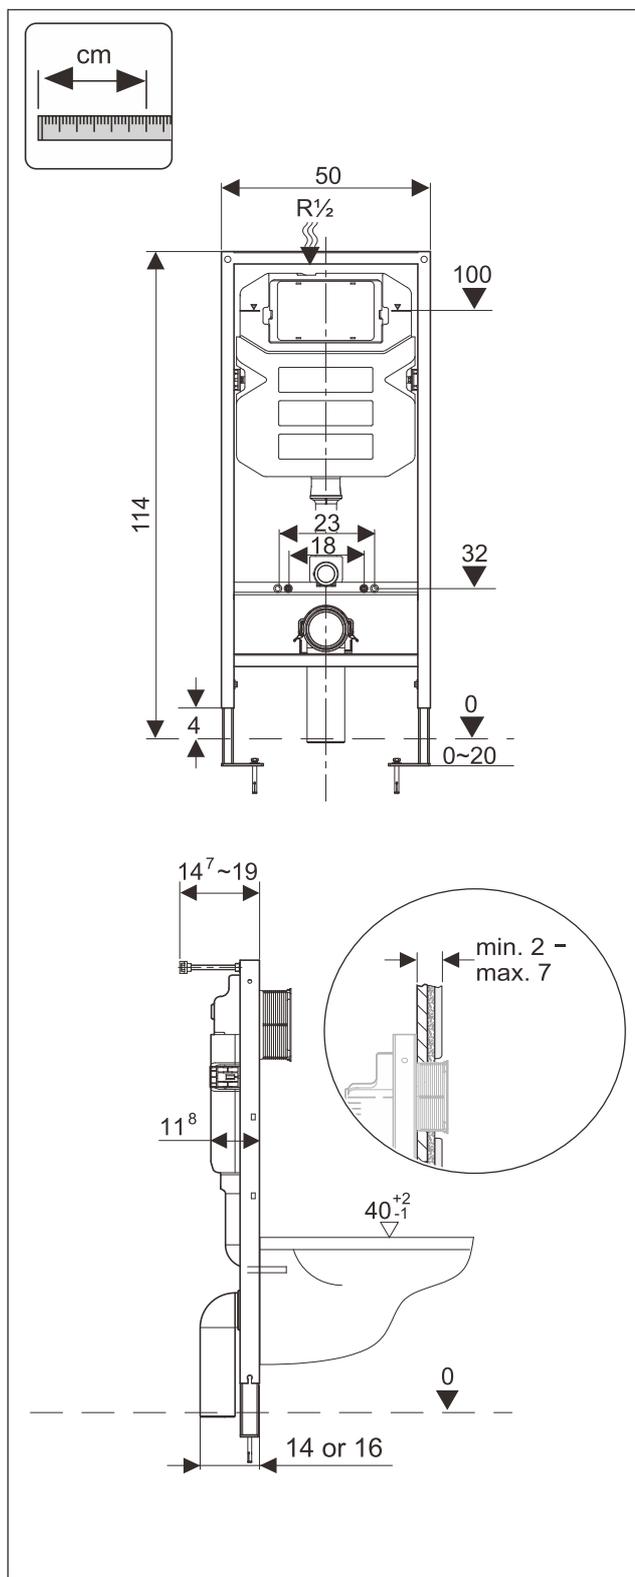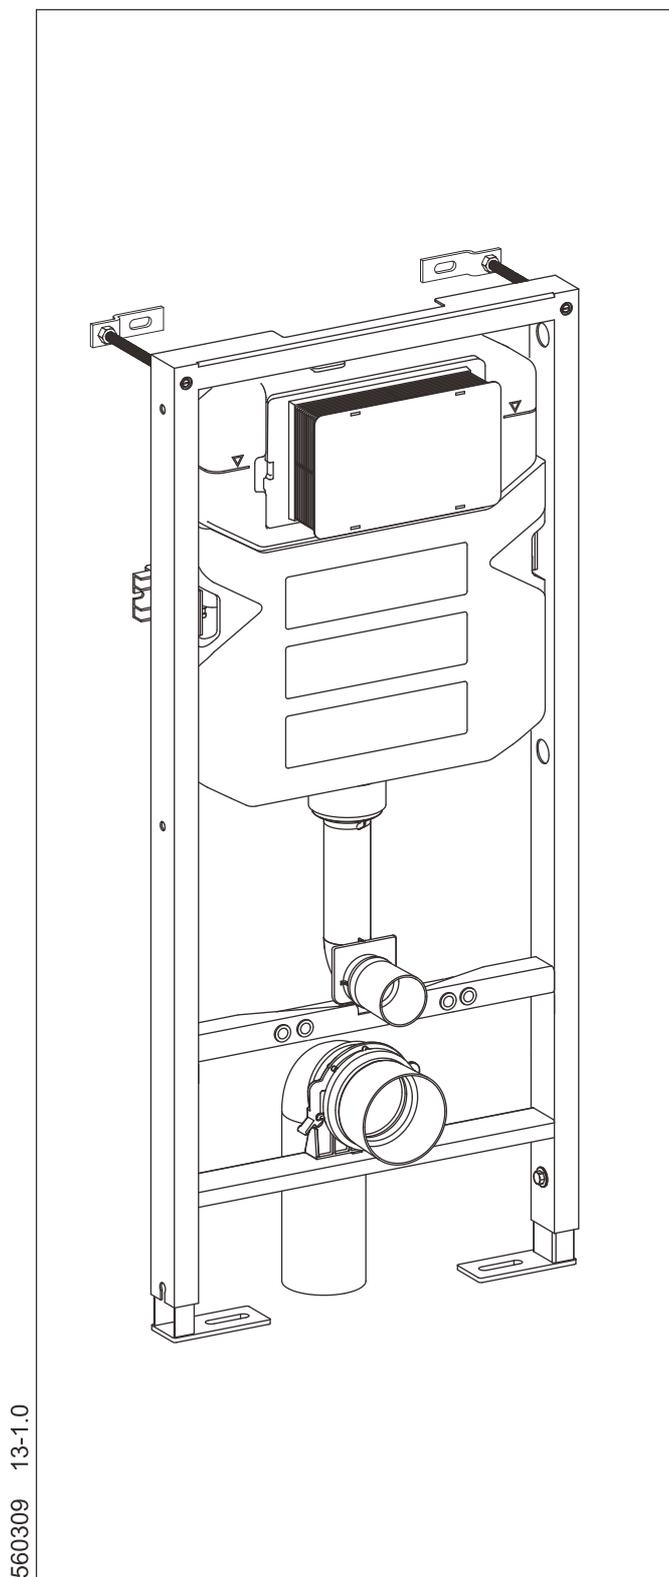







# Installation

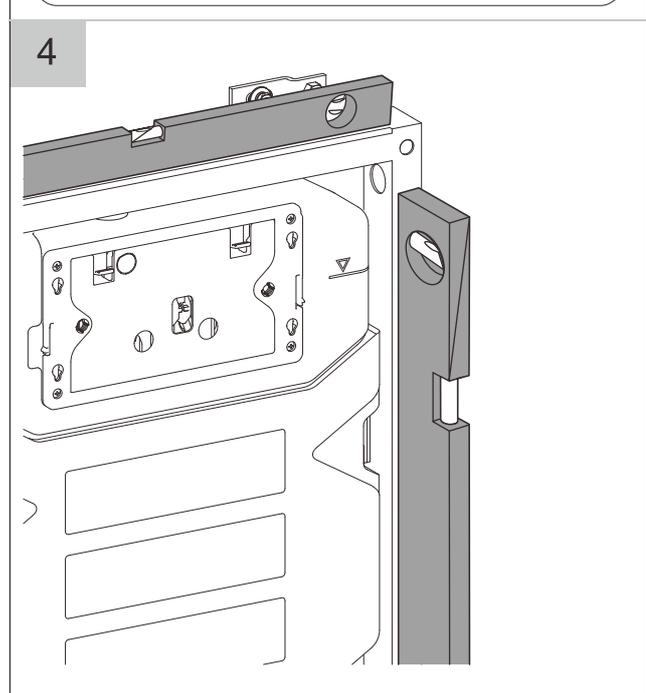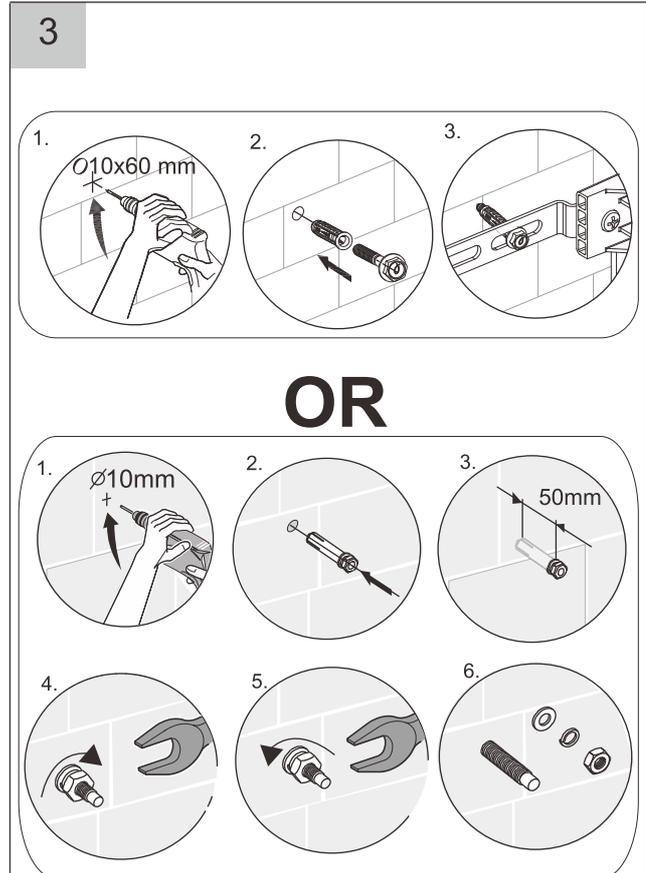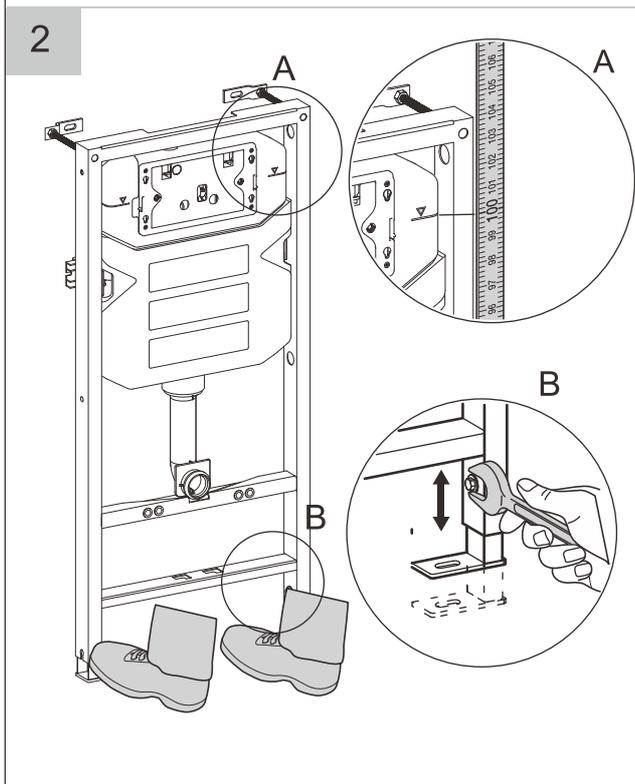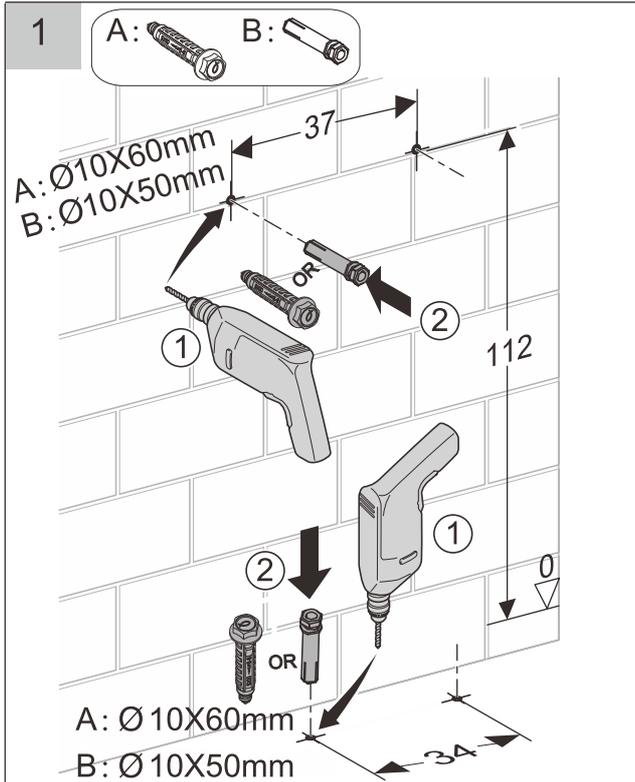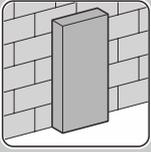






# Installation

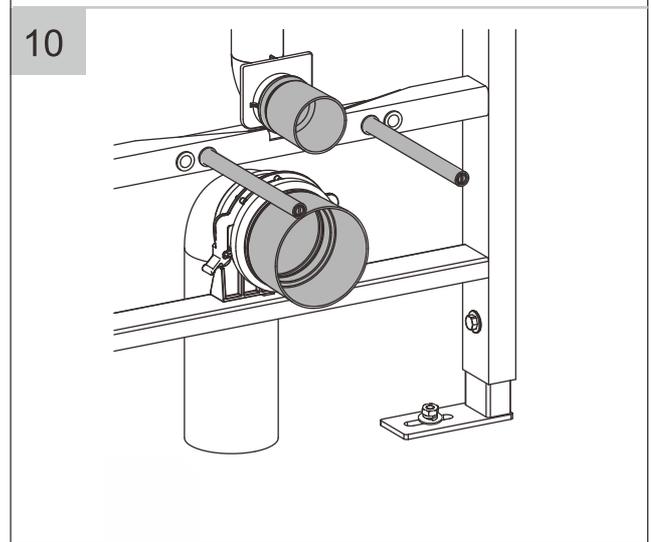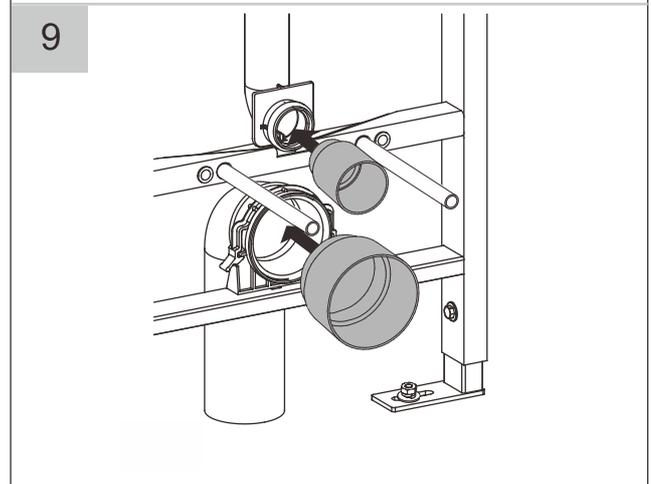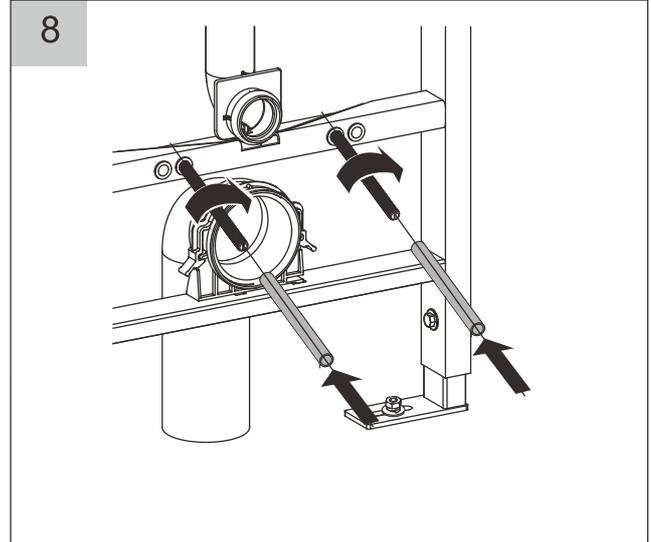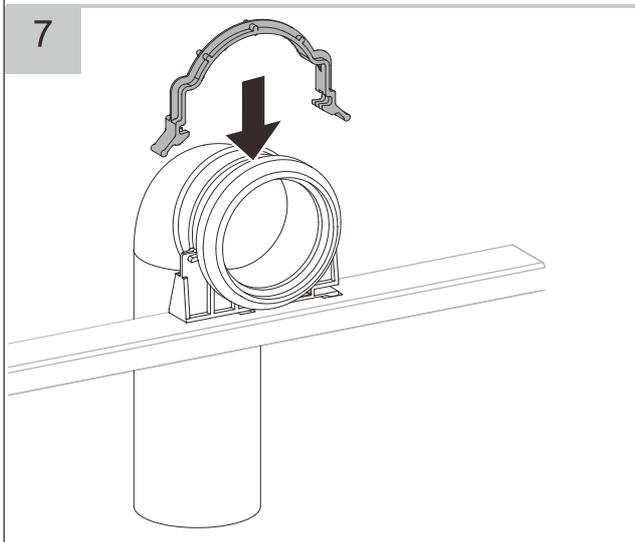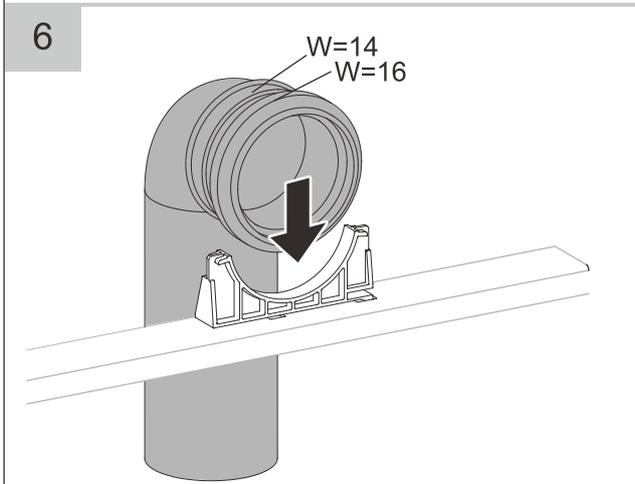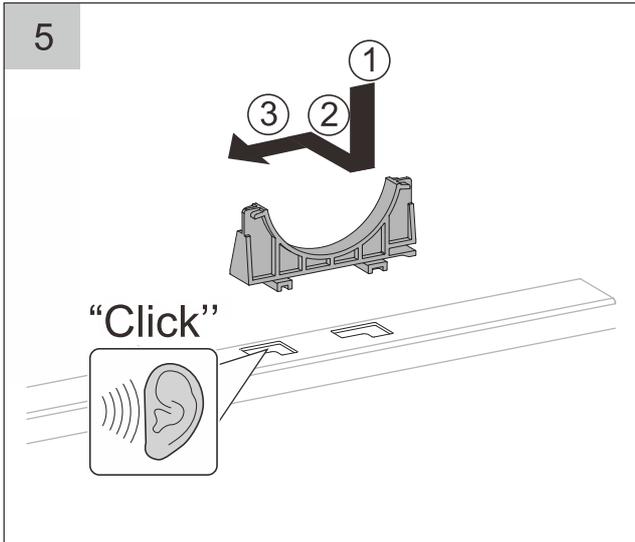







# Installation

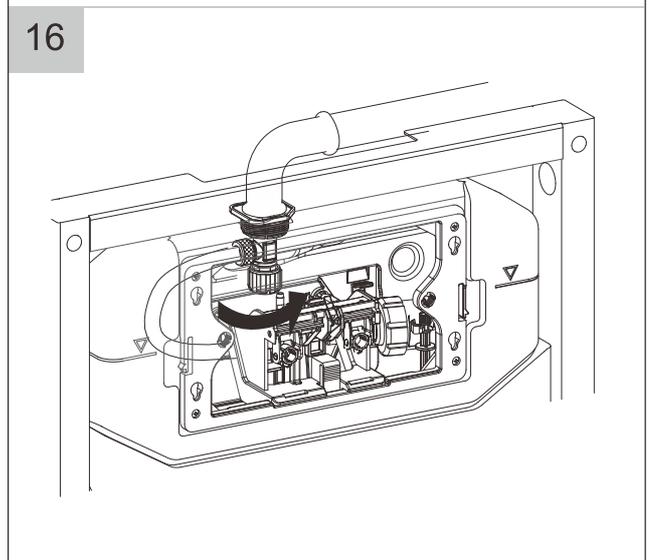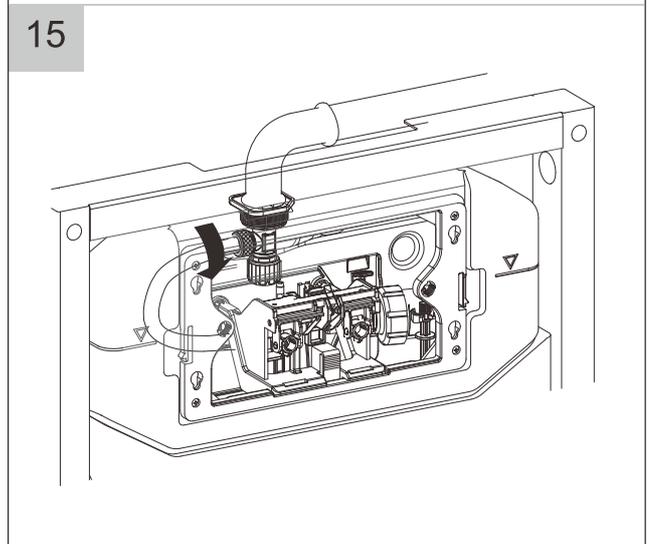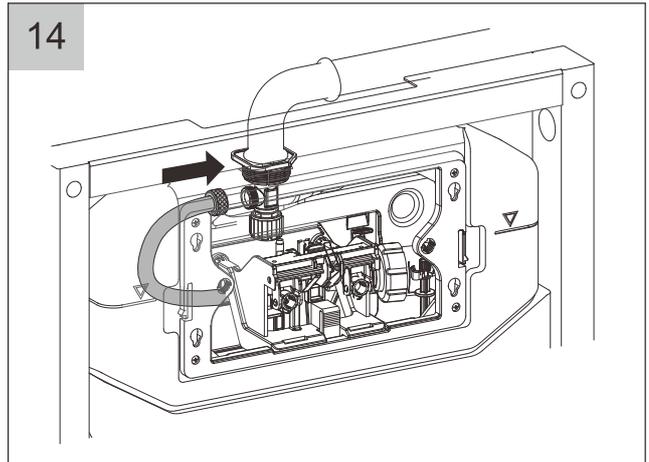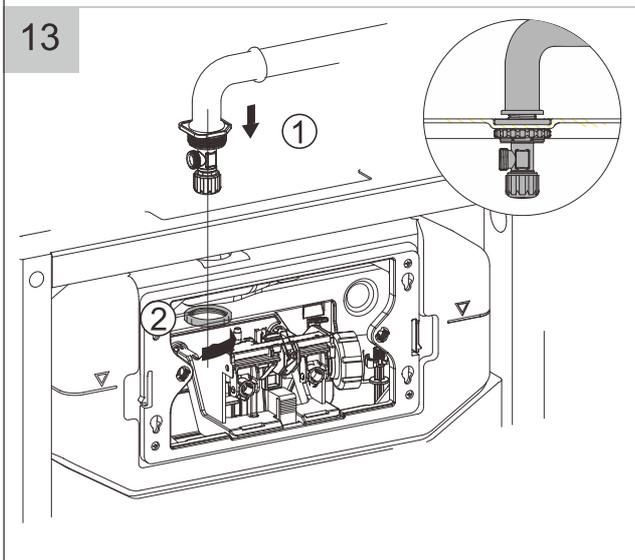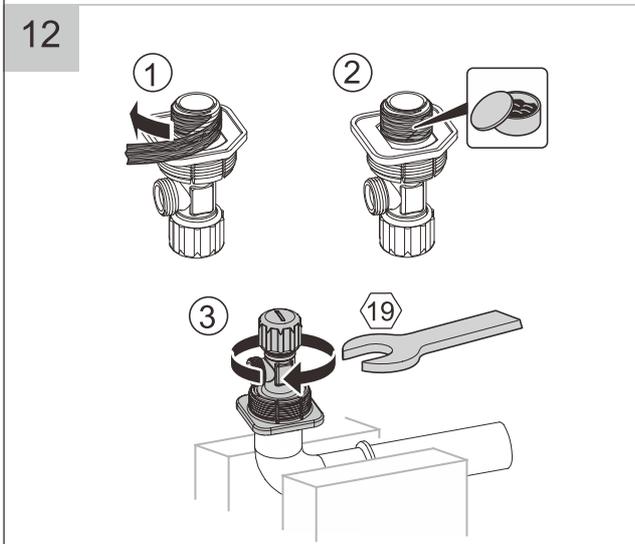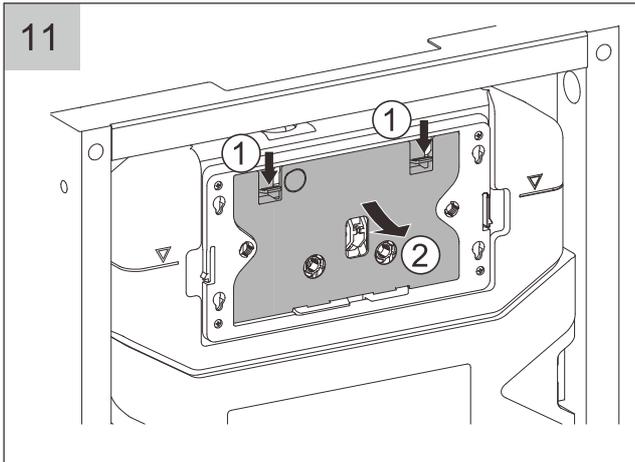







# Installation

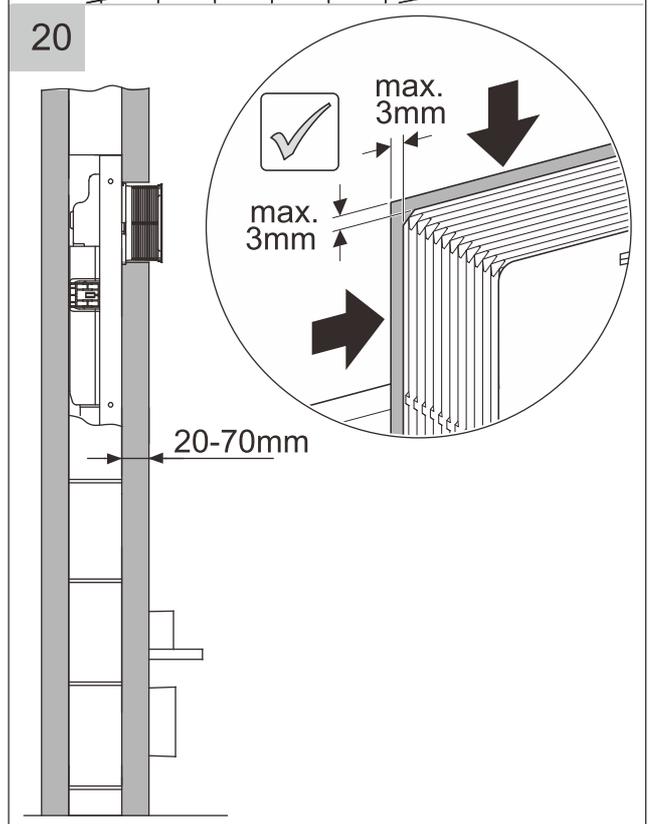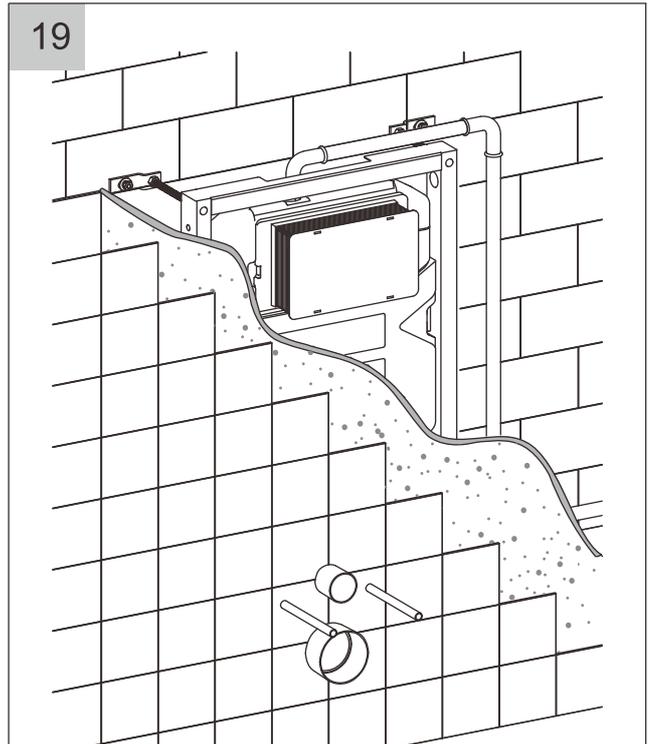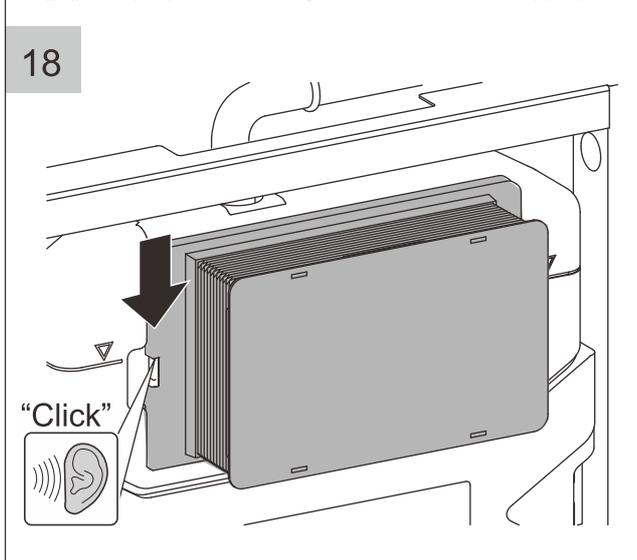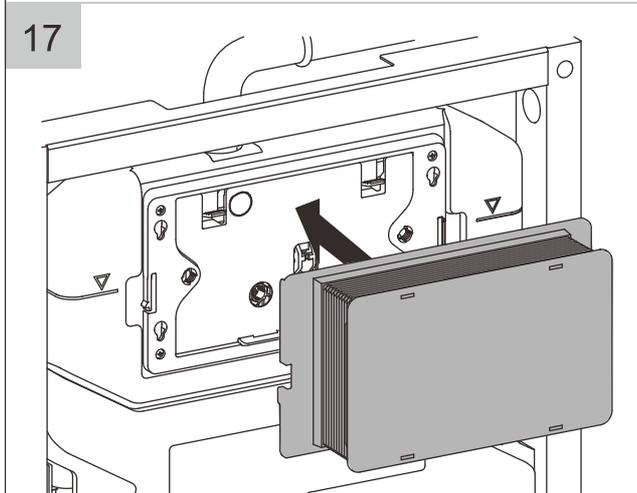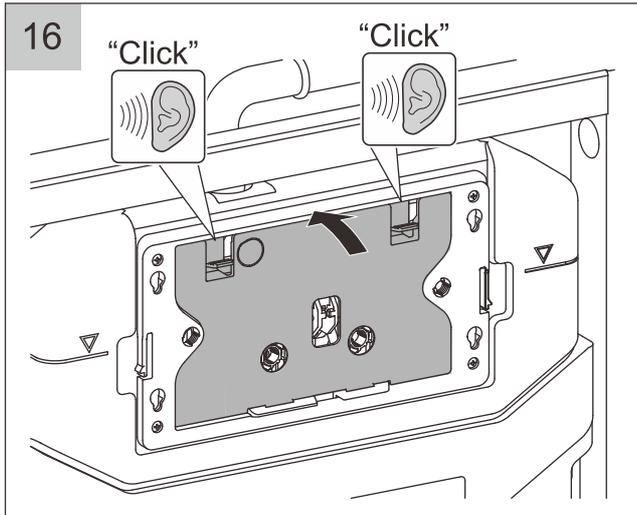

# Installation

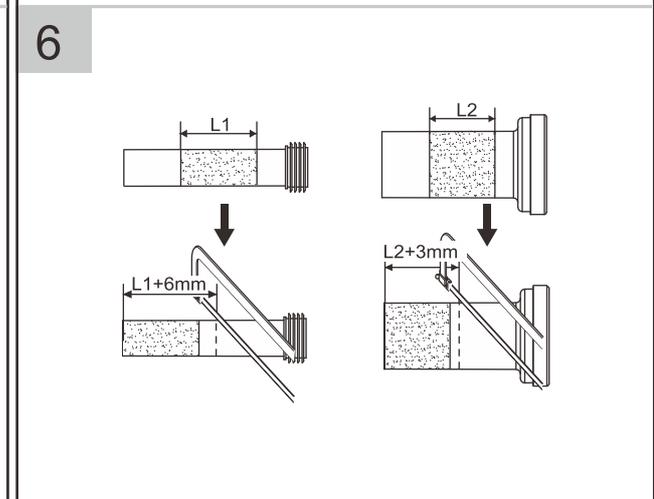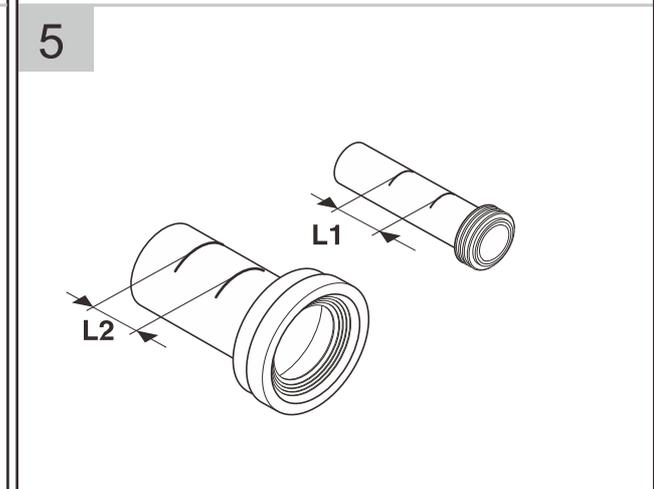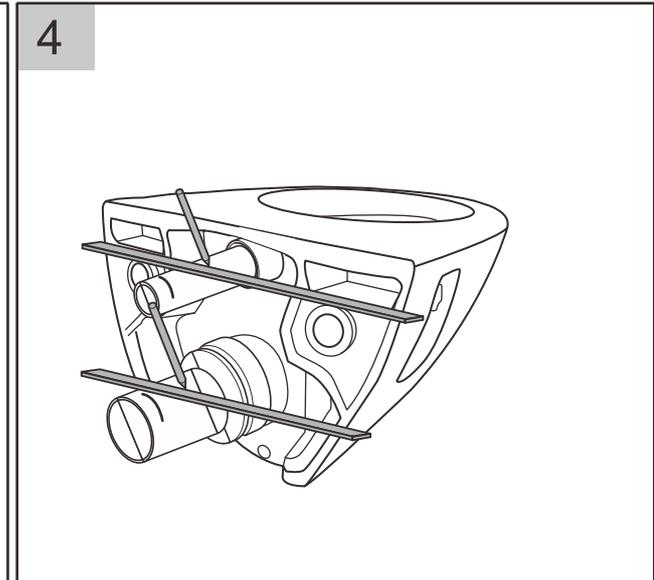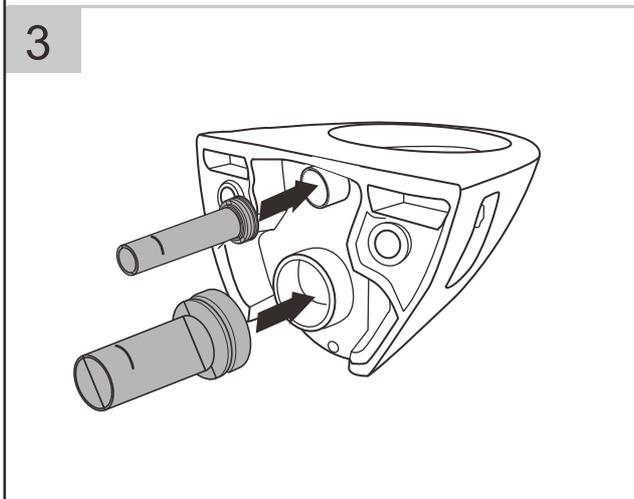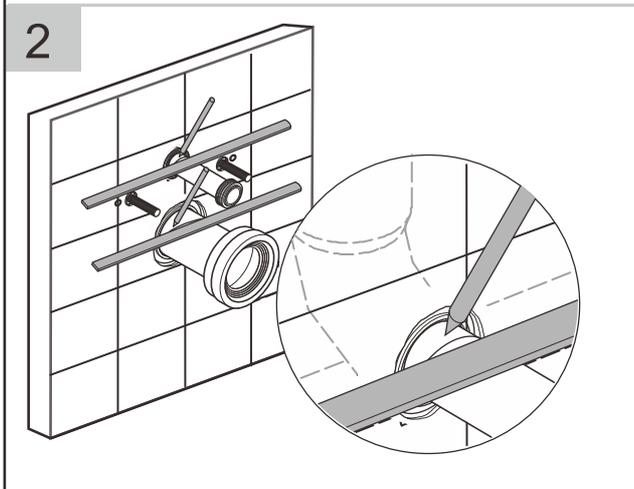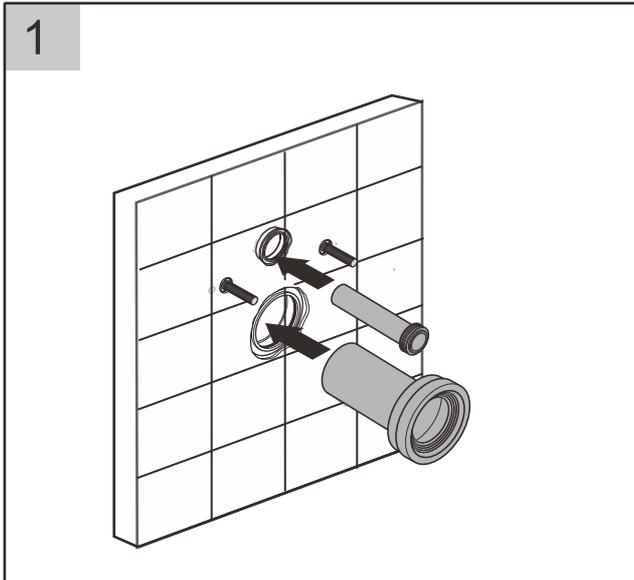

# Installation

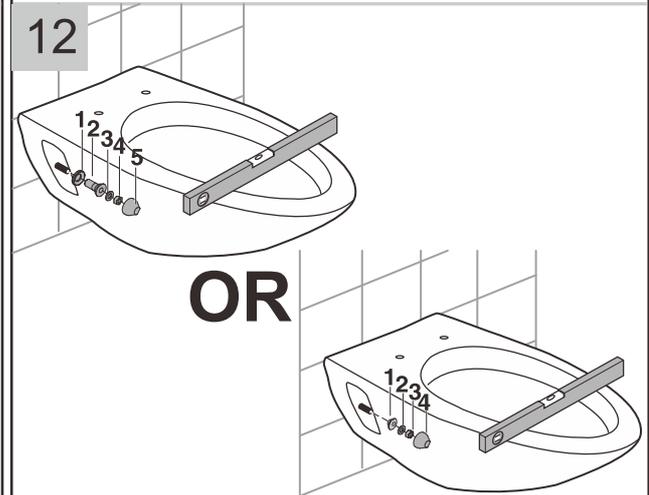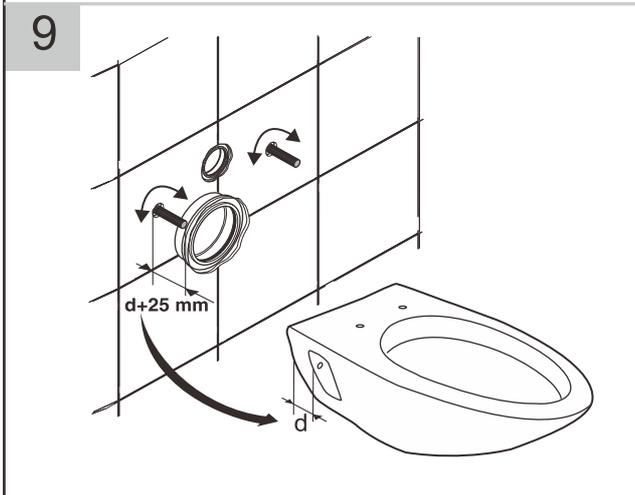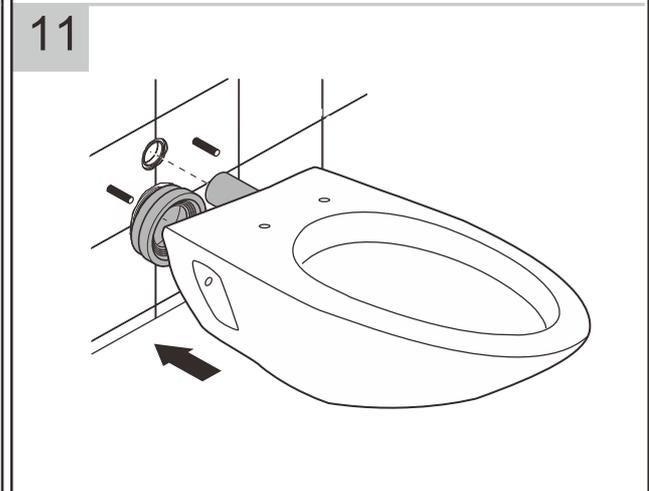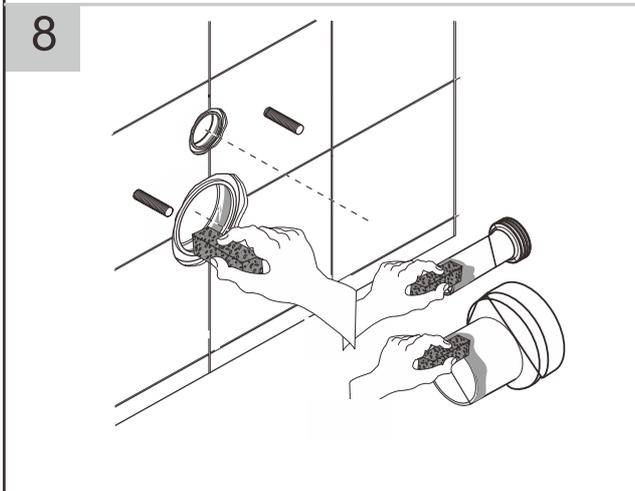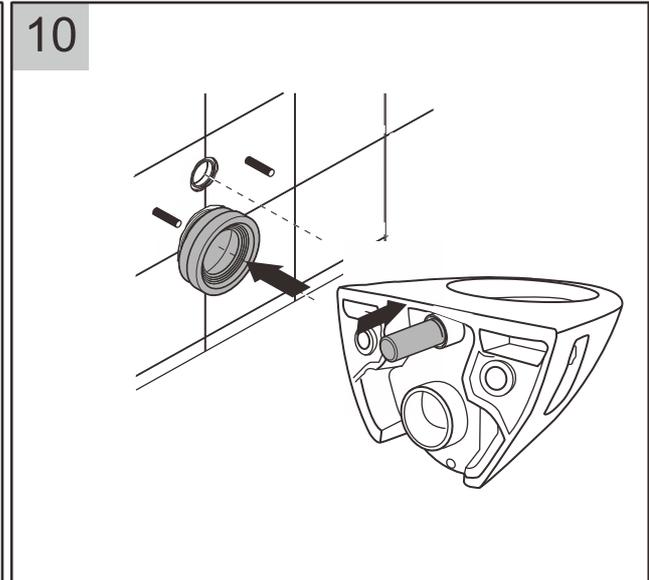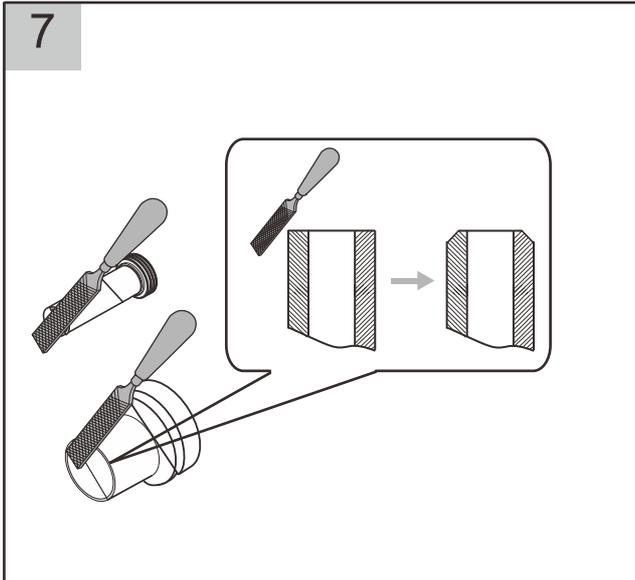

# 三、水箱故障解答说明

## 注意事项

 **提示:** 表示如果无视此标志而错误理解、操作时可能发生误解、危害人体及损坏物品的事件。

## 简易故障判断及处理方法

 **温馨提示:**

以下表格的问题点的处理方法中有注明（针对用户）的，用户可以参照自行解决。如果解决不了，严禁未经指定的非专业人士进行自行拆解和维修，需及时联系相应的专业人士解决，避免问题扩大化或产生不必要的麻烦和损失。

常见故障	原因	处理方法
水箱无法进水	1、入户总进水开关未开启或停水。	1、打开进水开关或联系物业解决（针对用户）
	2、水箱角阀未打开。	2、打开水箱角阀（针对专业人员）
	3、进水阀浮筒有异物卡住或进水阀传动构件使得浮筒无法正常下落。	3、检查进水阀并排除异物（针对专业人员）。
	4、不是以上原因，依然无法进水。	4、更换进水阀（针对专业人员）。
水箱有水不断流到马桶里	1、水箱出水口、排水阀底座周围有异物（砌墙时不小心掉进去的砂浆、小石块等），造成排水阀无法很好的密闭。	1、清理水箱内部的异物（针对专业人员）。
	2、面板调节螺杆外露部分偏长，面板装上后造成排水阀止水胶垫固定在某一位置上，无法密闭。	2、调整面板调节螺杆的位置（针对专业人员）。
	3、在水箱里面的面板调节螺杆偏长，顶到水箱内部的编织软管或其水箱箱体上，有时会无法回位。	3、剪短调节螺杆（针对专业人员）。